


# CONNECTING THE AUDIO SELECTOR

Use shielded audio cable with phono plugs for all connections. Be sure you connect left and right channels correctly (left to left and right to right) to maintain proper stereo separation.

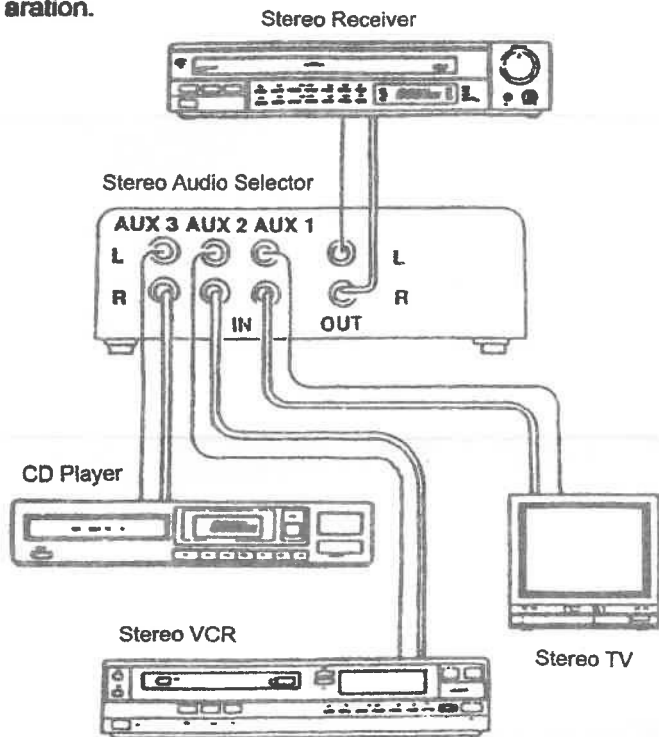

1. Connect the output jacks of each of your three audio sources (such as a CD, stereo VCR, or stereo TV) to your stereo audio selector's AUX 1, AUX 2, and AUX 3 input jacks.
2. Connect your audio selector's output jacks to the amplifier/receiver's input jacks (AUX, CD/AUX, or TV/AUX).